

WP[®] SUPERGRIT[®] SAFETY TREADS

SUPERGRIT[®] TREADS PROVIDE:

A heat-treated, corrosion resistant, extruded aluminum base with satin lacquered finish. The use of diamond hard aluminum oxide in the filler assures long tread life under heavy pedestrian traffic use. Supergrit[®] is appropriate for both inside and outside use.


SUPERGRIT[®] FEATURES:

Extruded aluminum base - abrasive filler.
Lengths to order - up to 120" max.
High content of aluminum oxide abrasive
11 standard colors - Colors extend throughout filler
Noncombustible
Protective tape available

FOR STEEL PAN STAIRS WITH SLOPED RISERS

SUPERGRIT[®] SPECIFICATION:

- Provide Supergrit[®] type 138 safety nosings as manufactured by Wooster Products Inc for interior and exterior stairs.
- Nosing base shall be type 6063-T5 extruded aluminum.
- Anti-slip filler shall contain not less than 65% virgin grain Aluminum Oxide/Silicon Carbide abrasive.
- Nosings shall be noncombustible as tested under Federal Test Method Standard No. 501a. Method 6411
- Type of anchor shall be specified.
- Nosings shall terminate not more than 4" from ends of steps for poured concrete stairs; for concrete filled steel pan stairs, nosings shall be full length of steps less 1/8" clearance.
- Color shall extend uniformly throughout the filler; black color will be furnished if no other color is specified.
- Nosings shall finish flush with the top of the traffic surface.

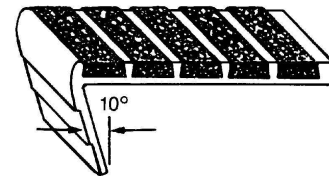

Type 138
3" wide, 1/4" thick, nose 1 1/8" underside
DRAWING NOT TO SCALE

The type 138 is available with the following types of anchors: Time Savers, Wing Anchors Nuts & Bolts, Tapcons, Wood Screws, Screws & Expansion Shields

GUIDELINES FOR THE INSTALLATION OF METAL SAFETY TREADS OR NOSINGS INTO NEW CONCRETE OR STEEL PAN FILLED STAIRS:

The use of very large aggregate in the concrete mix may make placement of the safety nosing difficult. Safety nosing placement may be difficult in concrete with very low slump. Place concrete into the stair forms or steel pans as quickly as possible; schedule pours so as to install the metal safety nosings quickly before initial set of concrete occurs. Puddle the concrete, tamp the safety nosing to insure proper concrete formation around the anchors. Remove protective tape (if used) as soon as practical. Order nosings or treads well in advance of the pour or installation date. Close stairway after pour; permit no use for 24 hours.

WOOSTER PRODUCTS INC, 1000 SPRUCE ST., WOOSTER, OH 44691

Toll Free: 800-321-4936

Phone: 330-264-2844

Fax: 330-262-4151

Web Site: <http://www.wooster-products.com>

E-mail: sales@wooster-products.com